




Service Data

SD-01-335*

TU-FLO 700 COMPRESSOR

*Formerly SD-01-5

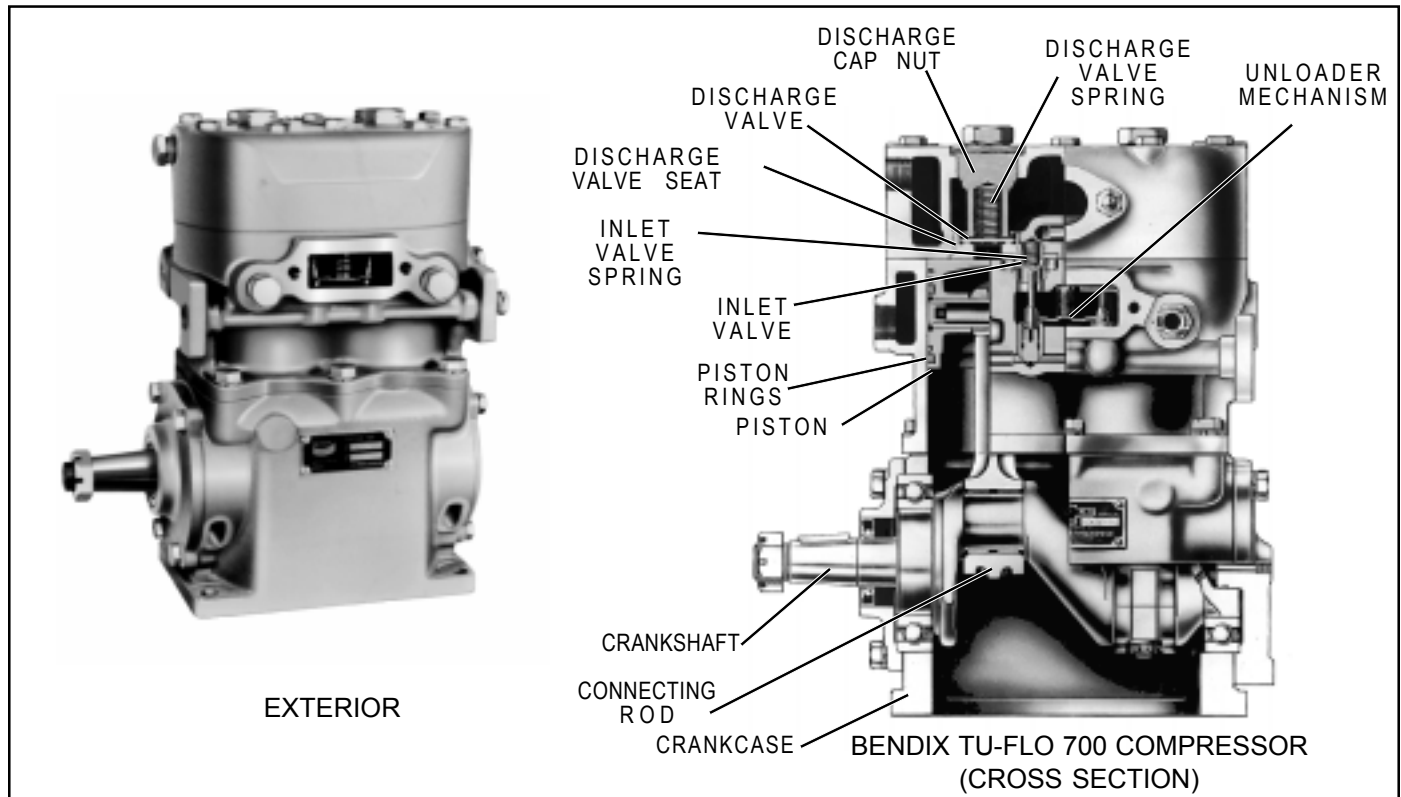

DESCRIPTION

The function of the air compressor is to provide and maintain air under pressure to operate devices in the air brake and/or auxiliary air systems.


The Tu-Flo 700 is a two cylinder, single stage, reciprocating compressor with a rated displacement of 15.5 cubic feet of air per minute at 1250 R.P.M. The Tu-Flo 700 is constructed from three major assemblies, the head, the cylinder block and the crankcase.


The head houses the discharge valving and is installed on the upper portion of the cylinder block. The cylinder block contains the cylinder bores and inlet valves and is mounted to the crankcase. The crankcase houses the crankshaft and main bearings.

Various mounting and drive configurations, required by the numerous vehicle engine designs, are available. Two governor mounting pads are located on either side of the cylinder block to provide convenient governor mounting.

Two methods are employed for cooling the Tu-Flo 700 during operation. The cylinder head is connected to the engine's cooling system, while the cylinder has external fins for efficient air cooling.

All Tu-Flo 700 compressors utilize the engine's pressurized oil system to lubricate the internal moving parts. A nameplate is attached to the crankcase to identify the compressor. The nameplate displays a Bendix piece number or in some cases an engine or vehicle manufacturer's piece number, along with a serial number.

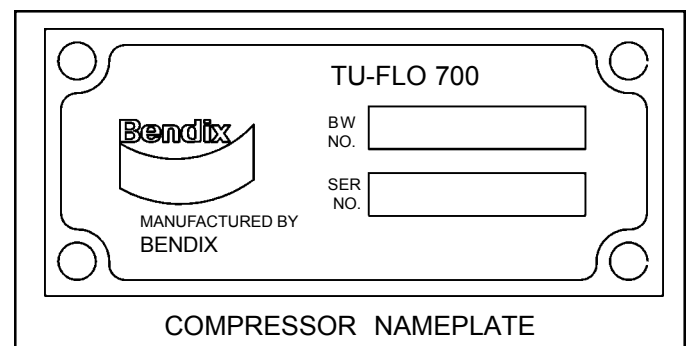

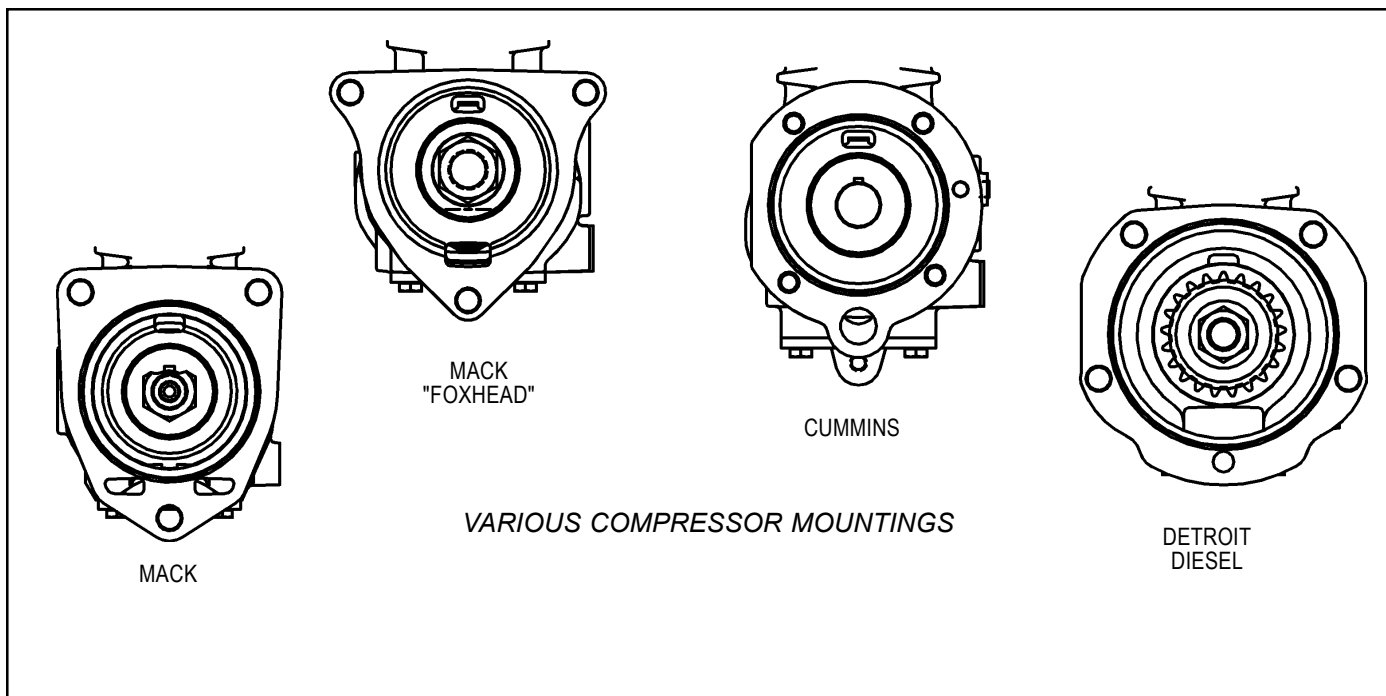

OPERATION

The compressor is driven by the vehicle engine and is operating continuously while the engine is running. Actual compression of air is controlled by the compressor unloading mechanism and the governor. The governor is generally mounted on the compressor and maintains the brake system air pressure to a preset maximum and minimum pressure level.

INTAKE AND COMPRESSION OF AIR (LOADED)

During the down stroke of the piston, a slight vacuum is created between the top of the piston and the head, causing the flat circular inlet valve to move up and off its seat. (Note the flat square discharge valve remains on its seat.) Atmospheric air is drawn through the air strainer by the open inlet valve and into the cylinder (see Fig. 1). As the piston begins its upward stroke, the air that was drawn into the cylinder on the down stroke is being compressed. Air pressure on top of the inlet valve plus the force of its spring, returns the inlet valve to its seat. The piston continues the upward stroke and compressed air then flows by the open discharge valve, into the discharge line and on to the reservoirs (see Fig. 2). As the piston reaches the top of its stroke and starts down, the discharge valve spring and air pressure in the discharge line returns the discharge valve to its seat. This prevents the compressed air in the discharge line from returning to the cylinder bore as the intake and compression cycle is repeated.

NON-COMPRESSION OF AIR (UNLOADED)

When air pressure in the reservoir reaches the cut-out setting of the governor, the governor allows air to pass from the

reservoir into the cavity beneath the unloader pistons. This lifts the unloader pistons and plungers. The plungers move up and hold the inlet valves off their seats (see Figure 3).

With the inlet valves held off their seats by the unloader pistons and plungers, air is pumped back and forth between the two cylinders. When air is used from the reservoir and the pressure drops to the cut-in setting of the governor, the governor closes and exhausts the air from beneath the unloader pistons. The unloader saddle spring forces the saddle, pistons and plungers down and the inlet valves return to their seats. Compression is then resumed.

LUBRICATION

Since all Tu-Flo 700 Compressors are connected to the engine's pressurized oil system, a continuous flow of oil is provided to the compressor, which is eventually returned to the engine. Oil is fed into the compressor in various ways, for example: through the rear end cover, the drive end of the crankshaft or through the front flange adapter. An oil passage in the crankshaft conducts pressurized oil to the precision sleeve main bearings and to the connecting rod bearings. Splash lubrication of the cylinder bores, connecting rod wrist pin bushings, and the ball type main bearings, on some models, is obtained as oil is forced out around the crankshaft journals by engine oil pressure.

COOLING

Air flowing through the engine compartment from the action of the engine's fan and the movement of the vehicle assists in cooling the crankcase. Coolant flowing from the engine's cooling system through connecting lines enters the compressor and flows through the internal passages in the

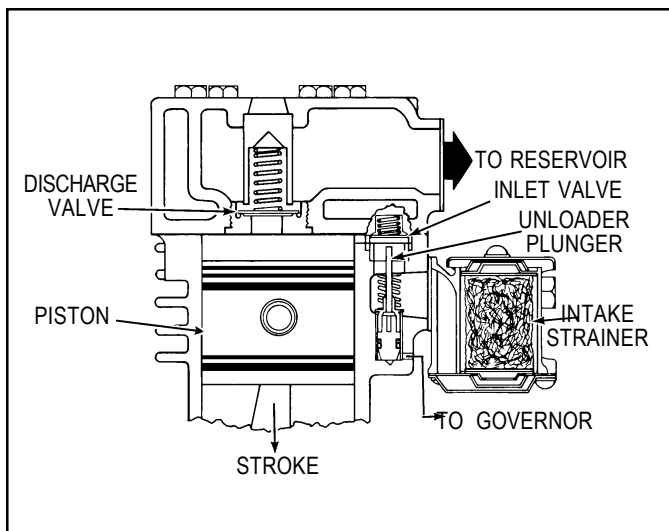


FIGURE 1 - INTAKE

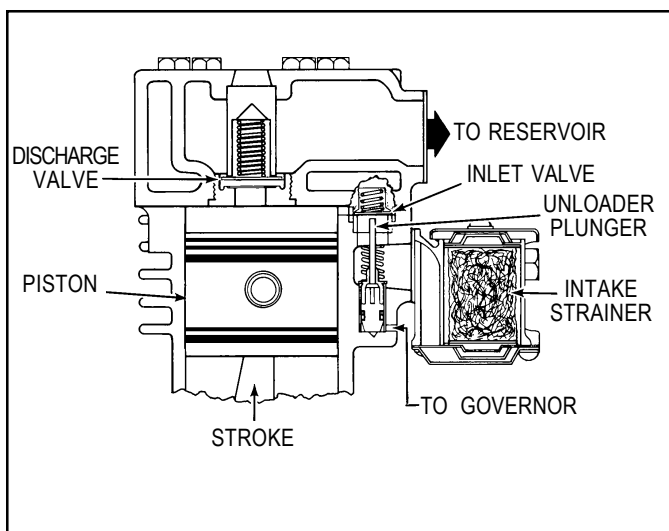


FIGURE 2 - COMPRESSION

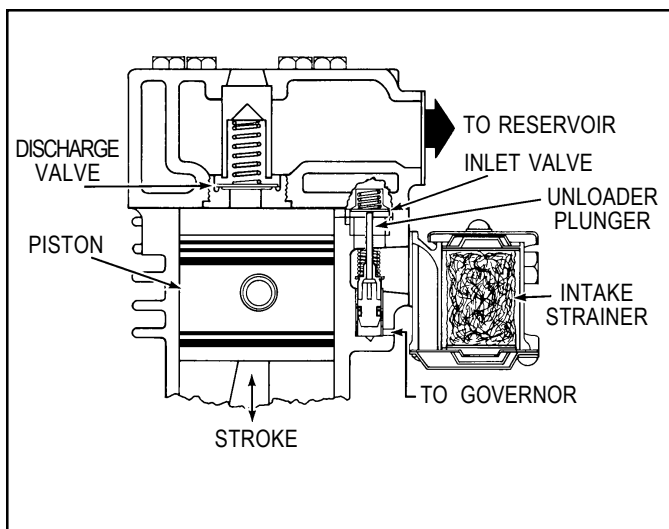


FIGURE 3 - UNLOADING

cylinder block and head and back to the engine. Proper cooling is important in maintaining discharge air temperatures below the 400°F recommended maximum.

PREVENTIVE MAINTENANCE

Important Note: Review the warranty policy before performing any intrusive maintenance procedures. An extended warranty may be voided if intrusive maintenance is performed during this period.

Every month, 300 operating hours or after each 10,000 miles, depending on the operating conditions, experience and the type of strainer used, service the air strainer.

POLYURETHANE SPONGE STRAINER

Every 5000 miles or 150 operating hours:

Remove and wash all of the parts. The strainer element should be cleaned or replaced. If the element is cleaned, it should be washed in a commercial solvent or a detergent and water solution. The element should be saturated in clean engine oil, then squeezed dry before replacing it in the strainer. Be sure to replace the air strainer gasket if the entire air strainer is removed from the compressor intake.

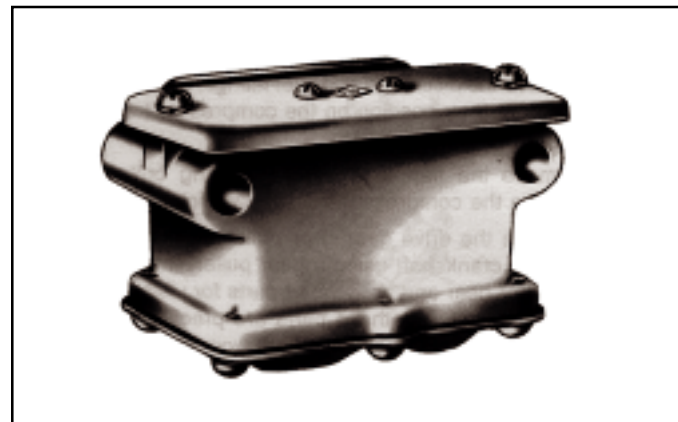


FIGURE 4 - POLYURETHANE SPONGE STRAINER

DRY ELEMENT—PLEATED PAPER AIR STRAINER

Every 20,000 miles or 800 operating hours:

Remove the spring clips from either side of mounting baffle and remove the cover. Replace the pleated paper filter and remount the cleaned cover making sure the filter is in position. Be sure to replace the air strainer gasket if the entire air strainer is removed from the compressor intake. **(Note:** Some compressors are fitted with compressor intake adapters which allow the compressor intake to be connected to the engine air cleaner.) In this case, the compressor receives a supply of clean air from the engine air cleaner. When the engine air filter is changed, the compressor intake adapter should be checked. If it is loose, remove the intake

adapter, clean the strainer plate, if applicable, and replace the intake adapter gasket, and reinstall the adapter securely. Check line connections both at the compressor intake adapter and at the engine air cleaner. Inspect the connecting line for ruptures and replace it if necessary.



**FIGURE 5 - PAPER AIR STRAINER DRY ELEMENT-
PLEATED**

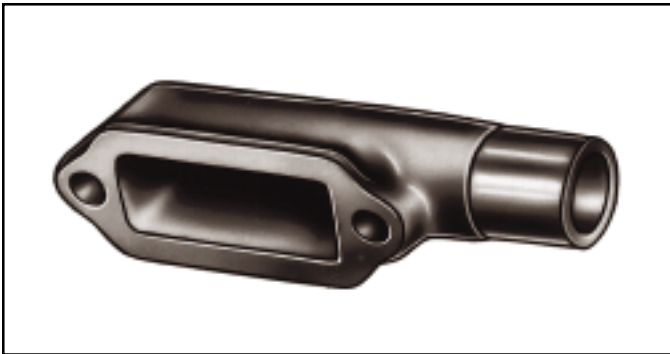


FIGURE 6 - COMPRESSOR INTAKE ADAPTER

Every 6 months, 1800 operating hours or after each 50,000 miles:

Remove the discharge head fittings and inspect the compressor discharge port and discharge line for excessive carbon deposits. If excessive buildup is noted in either, the discharge line must be cleaned or replaced and the compressor checked more thoroughly, paying special attention to the air induction system, oil supply and return system, and proper cooling. If necessary, repair or replace the compressor. Check for proper belt and pulley alignment and belt tension. Adjust if necessary, paying special attention not to over tighten the belt tension. Check for noisy compressor operation, which could indicate a worn drive gear coupling or a loose pulley. Adjust and/or replace as necessary. Check all compressor mounting bolts and retighten evenly if necessary. Check for leakage and proper unloader mechanism operation. Replace if defective in any way.

Every 24 months, 7200 operating hours or after each 200,000 miles:

Perform a thorough inspection as indicated below and depending upon the results of this inspection or experience, disassemble the compressor, clean and inspect all parts thoroughly, repair or replace all worn or damaged parts using only genuine Bendix replacements or replace the compressor with a genuine Bendix remanufactured unit.

Important: Should it be necessary to drain the engine cooling system to prevent damage from freezing, the cylinder head of the compressor must also be drained.

GENERAL SERVICE CHECKS

INSPECTION

It is of the utmost importance that the compressor receives a clean supply of air. The air strainer must be properly installed and kept clean. If the compressor intake is connected to the engine air cleaner, supercharger, etc., these connections must be properly installed and maintained. Check the compressor mountings to be sure they are secure. Check the drive for proper alignment, belt tension, etc.

Inspect the oil supply and return lines. Be sure these lines are properly installed and that the compressor is getting the proper supply of oil, and just as important, that the oil is returning to the engine. Check the coolant lines to and from the compressor and see that the cooling fins on the crankcase are not clogged with dirt, grease, etc. Check the unloader mechanism for proper and prompt operation.

OPERATING TESTS

Vehicles manufactured after the effective date of FMVSS 121, with the minimum required reservoir volume, must have a compressor capable of raising air system pressure from 85-100 P.S.I. in 25 seconds or less. This test is performed with the engine operating at maximum governed speed. The vehicle manufacturer must certify this performance on new vehicles with appropriate allowances for air systems with greater than the minimum required reservoir volume.

AIR LEAKAGE TESTS

Leakage past the discharge valves can be detected by removing the discharge line, applying shop air back through the discharge port and listening for escaping air. Also, the discharge valves and the unloader pistons can be checked for leakage by building up the air system until the governor cuts out, then stopping the engine. With the engine stopped, listen for escaping air at the compressor intake. To pinpoint leakage if noted, apply a small quantity of oil around the unloader pistons. If there is no noticeable leakage at the unloader pistons, the discharge valves may be leaking. If the compressor does not function as described above, or

leakage is excessive, it is recommended that it be returned to the nearest authorized Bendix Distributor for a factory remanufactured compressor. If this is not possible, the compressor can be repaired using genuine Bendix replacement parts, in which case, the following information should prove helpful.

REMOVING AND DISASSEMBLY

REMOVING

These instructions are general and are intended to be a guide, in some cases additional preparations and precautions are necessary. Chock the wheels of the vehicle and drain the air pressure from all the reservoirs in the system. Drain the engine cooling system and the cylinder head of the compressor. Disconnect all air, water and oil lines leading to and from the compressor. Remove the drive gear(s) or pulley from the compressor crankshaft using a gear puller. Inspect the pulley or gear and associated parts for visible wear or damage. Since these parts are precision fitted, they must be replaced if they are worn or damaged.

DISASSEMBLY

GENERAL

Remove road dirt and grease from the exterior of the compressor with a cleaning solvent. Before the compressor is disassembled, the following items should be marked to show their relationship when the compressor is assembled. Mark both the front and rear end cover in relation to the crankcase. Mark the drive end of the crankshaft in relation to the front end cover and the crankcase. Mark the cylinder head in relation to the block and the block in relation to the crankcase. Mark the base plate or base adapter in relation to the crankcase.

A convenient method to indicate the above relationship is to use a metal scribe to mark the parts with numbers or lines. Do not use a marking method that can be wiped off or obliterated during rebuilding, such as chalk. Remove all compressor attachments such as governors, air strainers or inlet fittings, discharge fittings and pipe plugs.

CYLINDER HEAD

Remove the six cylinder head cap screws (1) and tap the head with a soft mallet to break the gasket seal. Remove the inlet valve springs (2) and spring inserts (35) from the head and inlet valves (3) from their guides in the block.

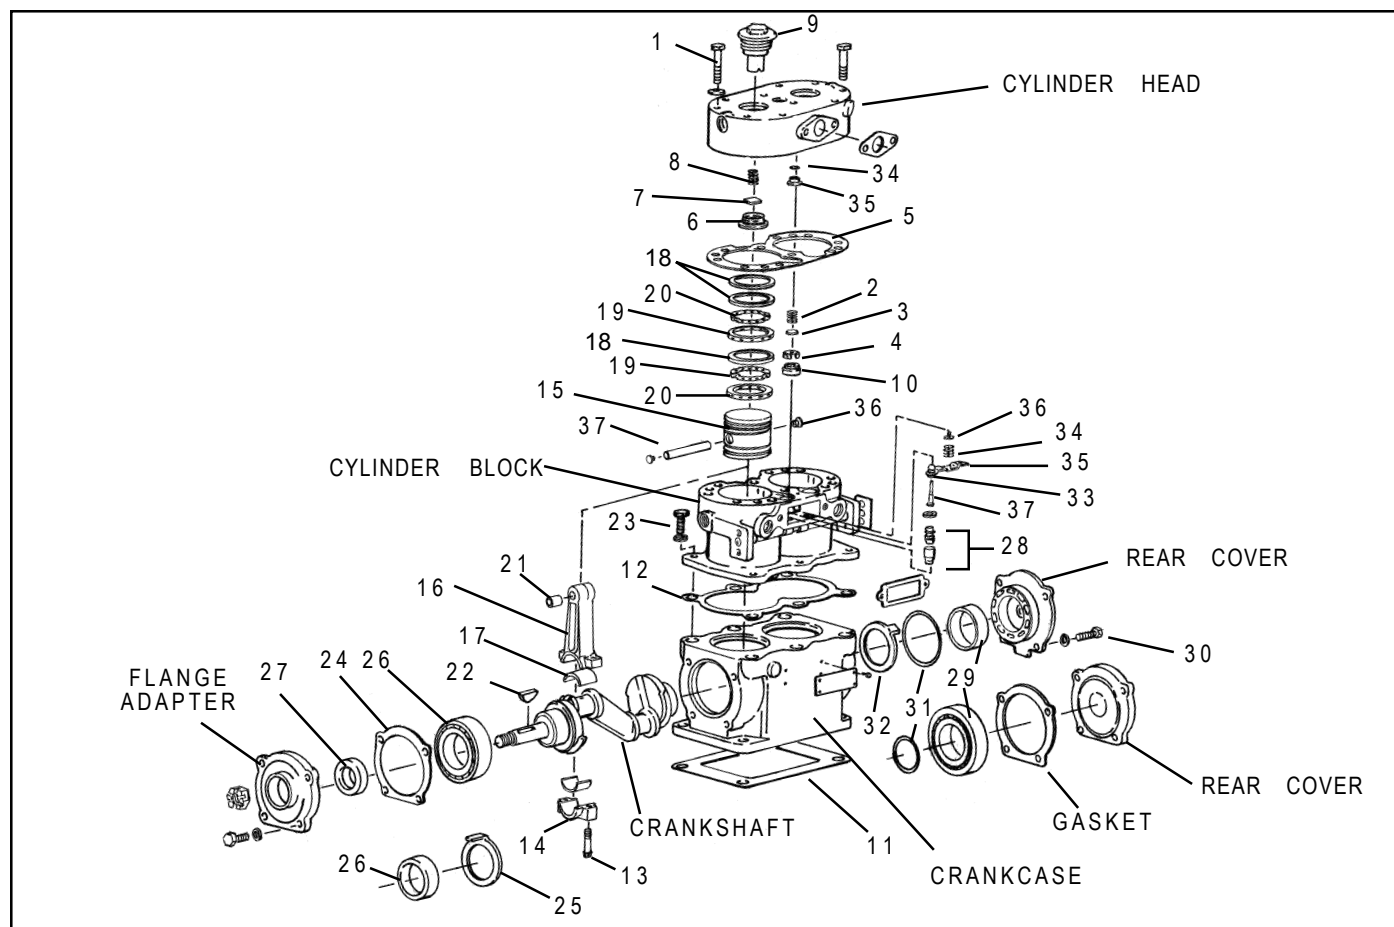


FIGURE 7 - TU-FLO 700 COMPRESSOR (THRU DRIVE) EXPLODED VIEW

Remove inlet valve guides (4) from around the inlet valve seats (34) on the block taking care not to damage seats. Scrape off any gasket material (5) from the cylinder head and block. Unscrew the discharge valve seats (6) from the head and remove the discharge valves (7) and springs (8). Inspect the discharge valve seats (2) for nicks, cracks, and excessive wear and replace if necessary. The discharge valve cap/nut stops (9) should be inspected for wear and replaced if excessive peening has occurred. To determine if excessive peening has occurred, measure the discharge valve travel. Discharge valve travel must not exceed .046 inches. If discharge valve travel is excessive, replace the cap nut/stop assembly, discharge valve and spring.

Discard the inlet valves (3) and springs (2), the discharge valves (7), springs (8) and the discharge valve seats (6) if defective.

CRANKCASE BASE PLATE OR ADAPTER

Remove the cap screws securing the base plate or base adapter. Tap with soft mallet to break the gasket seal (11). Scrape off any gasket material from crankcase and plate or adapter.

CONNECTING ROD ASSEMBLIES

(**Note:** Before removing the connecting rods, mark each connecting rod and its cap. Each connecting rod is matched to its own cap for proper bearing fit, and these parts must not be interchanged.) Remove the connecting rod bolts (13) and bearing caps (14). Push the piston (15) with the connecting rods (16) attached out the top of the cylinders of the cylinder block. Replace the bearing caps (14) on their respective connecting rods. Remove the piston rings from the pistons. If the pistons are to be removed from the connecting rods, remove the teflon plugs (36) and press the wrist pins (37) from the pistons and connecting rods.

If the pistons are removed from the rod, inspect the bronze wrist pin bushing. Press out and replace the bushing if it is excessively worn. (See inspection of parts) Discard the piston rings (18-20) and the connecting rod journal bearings (17). Discard the wrist pin bushings (21) if they were removed.

CYLINDER BLOCK

If the compressor is fitted with an air strainer, inlet elbow or governor remove the same.

Remove cap screws (23) securing cylinder block to the crankcase; separate the crankcase and cylinder block and scrape off any gasket material.

Remove the unloader spring (34), spring saddle (35), and spring seat (36) from the inlet cavity of the crankcase, using long nose pliers. With the use of shop air blow the unloader plungers (37) and guides (33) out of the cylinder block.

The inlet valve seats can be removed if worn or damaged and are being replaced. Unloader bore bushings should be inspected but not removed unless they are damaged. If bushings are to be replaced, they can be removed by running a 1/8" pipe threaded rod and pulling the bushing straight up and out. Do not use "easy out" for removing the bushings.

CRANKCASE

Remove the key (22) or keys from the crankshaft and any burrs on the crankshaft where the key or keys were removed.

(**Note:** Through Drive Compressors may have a crankshaft key at both ends.) Remove the four cap screws (23) securing front or drive-end end cover or flange adapter. Remove the end cover, taking care not to damage the crankshaft oil seal (27) or front main bearing (26), if any. Remove the O-ring (24) from around the front end cover. Remove the four cap screws (30) securing the rear end cover and remove the rear end cover taking care not to damage the rear main bearing (29), if any. Remove the O-ring (31) from around the end cover. If the compressor has ball type main bearings, press the crankshaft and ball bearings from the crankcase, then press the ball bearings from the crankshaft.

CLEANING OF PARTS

GENERAL

All parts should be cleaned in a good commercial grade solvent and dried prior to inspection.

CYLINDER HEAD

Remove all the carbon deposits from the discharge cavities and all the rust and scale from the cooling cavities of the cylinder head body. Scrape all the foreign matter from the body surfaces and use shop air pressure to blow the dirt particles from all the cavities.

CYLINDER BLOCK

Clean the carbon and dirt from the inlet and unloader passages. Use shop air pressure to blow the carbon and dirt deposits from the unloader passages.

OIL PASSAGES

Thoroughly clean all oil passages through the crankshaft, crankcase, end covers, and base plate or base adapter. Inspect the passages with a wire to be sure. Blow the loosened foreign matter out with air pressure.

INSPECTION OF PARTS

CYLINDER HEAD BODY

Inspect the cylinder head for cracks or damage. Apply shop air pressure to one of the coolant ports with all others

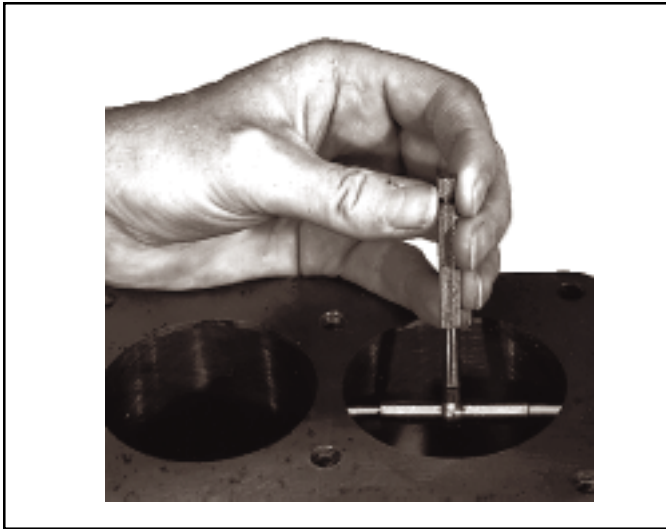


FIGURE 8 - MEASURING CYLINDER BORES

plugged, and check for leakage by applying a soap solution to the exterior of the body. If leakage is detected, replace the head.

END COVERS

Check for cracks and external damage. If the crankshaft main bearings are installed in the end cover, check for excessive wear and flat spots and replace them if necessary. If the compressor has an oil seal in the end cover, it should be removed by pressing it out of the end cover.

CRANKCASE

Check all crankcase surfaces for cracks and damage. On compressors where ball bearing main bearings are used the difference between the O.D. of the outer race and the I.D. of the crankcase hole should be .0000 in. to .0015 in. loose. This is to maintain the correct press fit. The crankcase must be replaced if the fit is too loose.

On compressors fitted with precision, sleeve main bearings, the difference between the O.D. of the crankshaft journal and the main bearing I.D. must not exceed .0065 in. If the clearance is greater than .0065 in., the end cover or main bearing must be replaced.

CYLINDER BLOCK

Check the unloader bore bushings to be sure they are not worn, rusted, or damaged. If these bushings are to be replaced, they can be removed by running a 1/8 in. pipe thread tap into the bushing, and inserting a 1/8 in. pipe threaded rod and pulling the bushing straight up and out. Do not use an easy-out for removing these bushings. If the inlet valve seats are worn or damaged, so they cannot be reclaimed by facing, they should be replaced. Cylinder bores should be checked with inside micrometers or calipers (see Figure 8). Cylinder bores which are scored or out of round by more than .001 in. or tapered more than .002 in. should

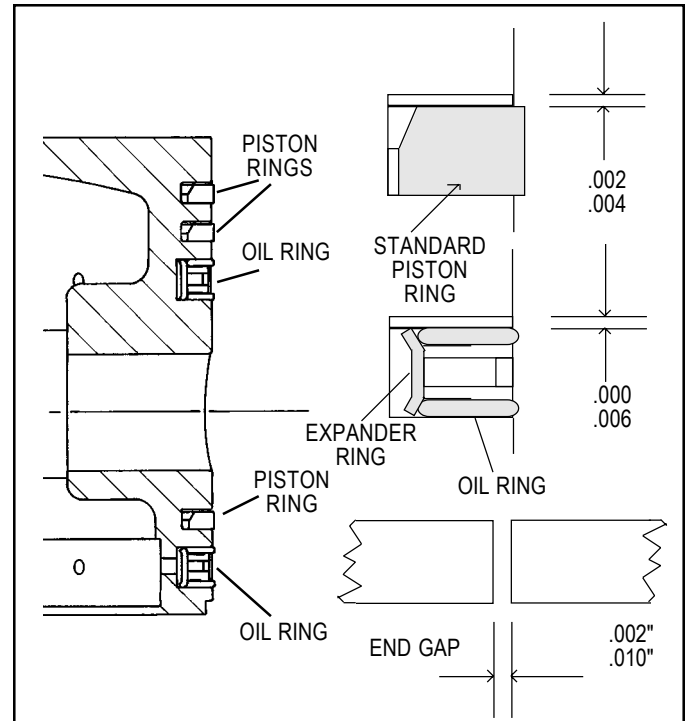


FIGURE 9 - CORRECT GROOVE CLEARANCE

be rebored or honed oversize. Oversized pistons and piston rings are available in .010 in., .020 in. and .030 in. oversizes. Cylinder bores must be smooth, straight, and round. Clearance between the cast iron pistons and cylinder bores should be between .002 in. minimum and .004 in. maximum.

PISTONS

Check the pistons for scores, cracks, or enlarged ring grooves; replace the pistons if any of these conditions are found. Measure each piston with a micrometer in relation to the cylinder bore diameter to be sure the diametral clearance is between .002 in. minimum and .004 in. maximum.

Check the fit of the wrist pins to the pistons and connecting rod bushings. The wrist pin should be a light press fit in the piston. If the wrist pin is a loose fit, the piston and pin assembly should be replaced. Check the fit of the wrist pin in the connecting rod bushing by rocking the piston. This clearance should not exceed .0007 in. Replace the wrist pin bushings if excessive clearance is found. Wrist pin bushings should be reamed to between .5314 in. and .5317 in. after being pressed into the connecting rods.

Check the fit of the piston rings in the piston ring grooves. Check the ring gap with the rings installed in the cylinder bores. Refer to Figure 9 for correct gap and groove clearances.

CRANKSHAFT

Check the crankshaft threads, keyways, tapered ends and all machined and ground surfaces for wear, scores, or damage. Standard crankshaft journals are 1.1250 in.- 1.1242 in. in diameter. If the crankshaft journals are excessively scored or worn or out of round and cannot be reground, the crankshaft must be replaced. Connecting rod bearing inserts are available in .010 in., .020 in. and .030 in. undersizes for compressors with reground crankshafts. Main bearing journals must be maintained so the ball bearings are a snug fit or so that no more than .0065 in. clearance exists between the precision sleeve main bearing and the main bearing journals on the crankshaft. In crankshafts fitted with oil seal rings, the oil seal ring groove or grooves must not be worn. The ring groove walls must have a good finish and they must be square. Check to be sure the oil passages are open through the crankshaft.

CONNECTING ROD BEARINGS

Used bearing inserts must be replaced. Connecting rod caps are not interchangeable. The locking slots of the connecting rod and cap should be positioned adjacent to each other. Clearance between the connecting journal and the connecting rod bearing must not be less than .0003 in. or more than .0021 in. after rebuilding.

REPAIRS

DISCHARGE VALVES, VALVE STOPS AND SEATS

If the discharge valve seats merely show signs of slight wear, they can be dressed by using a lapping stone, grinding compound and grinding tool. Install the new discharge valve springs and valves. Screw in the discharge valve seats. Discharge valve travel should be between .030 in. to .046 in.

To test for leakage by the discharge valves, apply 100 pounds of air pressure through the cylinder head discharge port and apply a soap solution to the discharge valves and seats. A slight leakage in the form of soap bubbles is permissible. If excessive leakage is found, leave the air pressure applied and with the use of a fiber or hardwood dowel and a hammer, tap the discharge valves off their seats several times. This will help the valves to seat and should reduce the leakage. With the air pressure still applied at the discharge port of the cylinder head, check for leakage around the discharge valve cap nut on the top of the cylinder head casting. No leakage is permitted.

INLET VALVES AND SEATS

Inlet valves and springs should be replaced, if the inlet valve seats show signs of slight nicks or scratches. They can be redressed with a fine piece of emery cloth or by lapping with

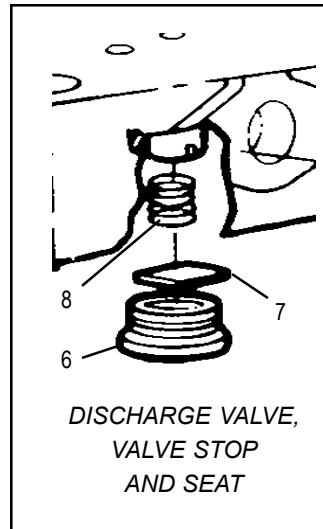


FIGURE 10

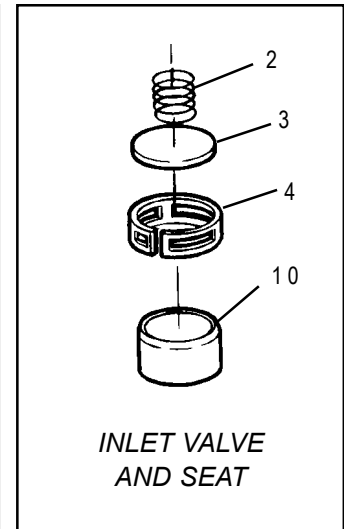


FIGURE 11

a lapping stone, grinding compound and grinding tool. If the seats are damaged to the extent that they cannot be reclaimed, they must be replaced. The dimension from the top of the cylinder block to the inlet valve seat should not exceed .113 in. nor be less than .101 in.

ASSEMBLY

General Note: All torques specified in this manual are assembly torques and can be expected to fall off after assembly is accomplished. Do not retorquer after initial assembly torques fall.

To convert inch pounds of torque to foot pounds of torque, divide inch pounds by 12.

inch pounds \div 12 = foot pounds

To convert foot pounds of torque to inch pounds of torque, multiply foot pounds by 12.

foot pounds \times 12 = inch pounds

INSTALLING THE CRANKSHAFT

Press new sleeve bearings in the end cover and crankcase. Ensure that the slot in the bearings line up with the oil passages in the end cover or crankcase. If you have a model with no oil passage present in the crankcase, press the sleeve bearing into the crankcase with the slot located 90 degrees from vertical.

Install the front thrust washer with the tang inserted in the slot toward the flange. Insert the crankshaft and the rear thrust washer with the tang toward the rear of the compressor.

Place the oil seal ring on the boss of the rear end cover and install the end cover making sure not to pinch the seal ring. Ensure the tang of the thrust washer is inserted in the slot

of the end cover. Fasten the end cover to the crankcase with the four cover cap screws. Torque the cap screws to 175-225 inch pounds in a cross pattern. **Note:** For cast iron flange adapters, torque the four 7/16 in. cap screws to 38-45 foot pounds. For die cast aluminum end covers, torque the four 7/16 in. cap screws to 25-30 foot pounds. All end covers using 5/16 in. cap screws or stud and nuts are torqued to 15-18 foot pounds. For through drive compressors with a cast iron end cover, torque the four 7/16 in. cap screws to 25-30 foot pounds.

PISTONS AND CONNECTING RODS

If new wrist pin bushings are to be used, they should be pressed into the connecting rods so that the oil hole in the bushing lines up with the one in the rod. The new bushings should then be reamed or honed to provide between .0001 in. (.00254 mm) and .0006 in. (.01524 mm) clearance on the wrist pin. Position the connecting rod in the piston and press in the wrist pin.

Pistons installed in compressors manufactured prior to November, 1976, will have the wrist pin secured in the piston by a lock wire extending through matching holes in wrist pin and piston boss, anchored in a hole in the side wall of the piston. If the original pistons are used the wrist pin must be pressed in so the hole in the wrist pin aligns with that of the piston and secure same by inserting the new lockwire through the hole in piston and wrist pin and lock the wire by snapping the short 90 section into the lockwire hole in the bottom of the piston.

Compressors built after November, 1976, will have the wrist pin secured by Teflon buttons in either end of the wrist pin, allowing the wrist pin to float. The Teflon buttons pc. no. 292392 may be used with either new or old wrist pins. The later design pistons have two rings above the wrist pin and one below. Install the piston rings in the correct location with the ring pipemarks up. Stagger the position of the ring gaps. Prelubricate the piston, piston rings, wrist pins and connecting rod.

CYLINDER BLOCK

Align gasket (12), crankcase and cylinder block and secure with cap screws (23). Torque to 15-19 foot pounds.

UNLOADER

A new unloader kit should be used when rebuilding. (Figure 12). (Piece Number 279615). The unloader pistons in the kit are prelubricated with a special lubricant piece number 239379 and need no additional lubrication. Install the unloader pistons (28) in their bores being careful not to cut the o-rings. Position the unloader plungers (37) in their guides (38) and slip them in and over the tops of the pistons. Install the unloader spring seat (36) in the cylinder block inlet cavity;

a small hole is drilled in the cylinder block for this purpose. Position the saddle (35) between the unloader piston guides (38), so its forks are centered on the guides. Install the unloader spring (34), making sure it seats over the spring seats both in the block and on the saddle. Position and install the inlet valve guides (38), then drop the inlet valves in their guides. The inlet valves should be a loose sliding fit in the guides.

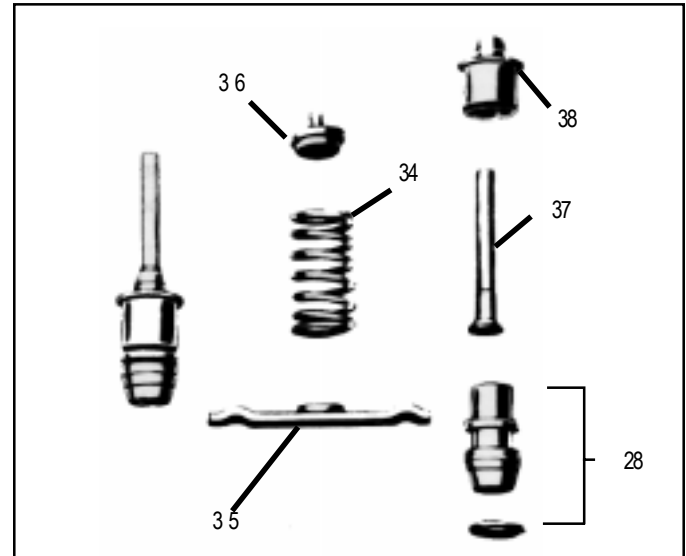


FIGURE 12- UNLOADER MECHANISM

CYLINDER HEAD

Install the inlet valve springs in the cylinder head by applying a turning motion to the spring after it is in the head. The turning motion should dig the spring wire into the spring seat in the bottom of the spring bore in the head. Should this procedure fail after repeated attempts, use a very small quantity of grease to hold them in place, just enough to keep the springs from falling out. Place the cylinder head gasket on the cylinder block. Carefully align the cylinder head assembly on the block and install the cap screws, tightening them evenly to a torque of 15-19 foot pounds.

BASE PLATE OR BASE ADAPTER

Position the base plate or base adapter gasket on the crankcase and install the base plate or base adapter as marked before disassembly. Tighten the six cap screws securing the cast iron base adapter evenly to a torque of 38-45 foot pounds, and 12-16 foot pounds for base plate or aluminum cover.

TESTING REBUILT COMPRESSOR

In order to properly test a compressor under operating conditions, a test rack for correct mounting, cooling, lubricating, and driving the compressor is necessary. Such tests are not compulsory if the unit has been carefully rebuilt by an experienced person. A compressor efficiency or build-up test can be run which is not too difficult. An engine

lubricated compressor must be connected to an oil supply line of at least 15 P.S.I. pressure during the test and an oil return line must be installed to keep the crankcase drained.

Connect to the compressor discharge port, a reservoir with a volume of 1500 cubic inches, including the volume of connecting line. With the compressor operating at 2100 R.P.M., the time required to raise the reservoir(s) pressure from 85 P.S.I. to 100 P.S.I. should not exceed 7 seconds. During this test, the compressor should be checked for gasket leakage and noisy operation, as well as unloader operation and leakage.

INSPECTION OF REBUILT UNIT

Check to be sure that covers, plugs, or masking tape are used to protect all ports if compressor is not to be installed immediately. Fit the end of all crankshafts with keys, nuts, and cotter pins as required and then protect the ends against damage by wrapping with masking tape or friction tape. The open bottom of a vertical engine lubricated compressors should be protected against the entrance of dirt during handling or storage, by installing a temporary cover over the base.

IMPORTANT! PLEASE READ:

When working on or around a vehicle, the following general precautions should be observed:

- 1. Park the vehicle on a level surface, apply the parking brakes, and always block the wheels.**
- 2. Stop the engine when working around the vehicle.**
- 3. If the vehicle is equipped with air brakes, make certain to drain the air pressure from all reservoirs before beginning any work on the vehicle.**
- 4. Following the vehicle manufacturer's recommended procedures, deactivate the electrical system in a manner that removes all electrical power from the vehicle.**
- 5. When working in the engine compartment the engine should be shut off. Where circumstances require that the engine be in operation, extreme caution should be used to prevent personal injury resulting from contact with moving, rotating, leaking, heated, or electrically charged components.**
- 6. Never connect or disconnect a hose or line containing pressure; it may whip. Never remove a component or plug unless you are certain all system pressure has been depleted.**
- 7. Never exceed recommended pressures and always wear safety glasses.**
- 8. Do not attempt to install, remove, disassemble or assemble a component until you have read and thoroughly understand the recommended procedures. Use only the proper tools and observe all precautions pertaining to use of those tools.**
- 9. Use only genuine Bendix replacement parts, components, and kits. Replacement hardware, tubing, hose, fittings, etc. should be of equivalent size, type, and strength as original equipment and be designed specifically for such applications and systems.**
- 10. Components with stripped threads or damaged parts should be replaced rather than repaired. Repairs requiring machining or welding should not be attempted unless specifically approved and stated by the vehicle or component manufacturer.**
- 11. Prior to returning the vehicle to service, make certain all components and systems are restored to their proper operating condition.**

TABULATED DATA

| | |
|--|---------------------------|
| Number of cylinders | 2 |
| Bore size | 2.75 in. |
| Stroke | 1.81 in. |
| Piston displacement at 1250 RPM | 15.5 cu. ft. |
| Maximum recommended RPM (naturally aspirated) | 3000 |
| Minimum coolant flow at maximum RPM | 2.5 gal./min. |
| Recommended minimum discharge line size | 5/8 in. OD Copper Tube |
| Recommended minimum oil return line size | 5/8 in. OD Tubing |
| Recommended minimum oil supply line size | 1/4 in. OD Tubing |
| Recommended minimum unloader line size | 1/4 in. OD Tubing |
| Recommended minimum coolant line size | 1/2 in. OD Tubing |
| Recommended maximum inlet air temperature | 250°F |
| Recommended maximum discharge air temperature | 400°F |
| Minimum pressure required to unload | 60 PSI |

COMPRESSOR TROUBLESHOOTING CHART

| SYMPTOMS | CAUSE | REMEDY |
|--|---|---|
| 1. Compressor passes excessive oil as evidenced by presence of oil at exhaust ports of valving or seeping from air strainer. | A. Restricted air intake. | A. Check engine or compressor air cleaner and replace if necessary. Check compressor air inlet for kinks, excessive bends and be certain inlet lines have the minimum specified inside diameter. Recommended minimum inlet line inside diameter is 5/8". Recommended maximum air inlet restriction is 25" of water. |
| | B. Restricted oil return (to engine). | B. Oil return to the engine should not be in any way restricted. Check for excessive bends, kinks and restrictions in the oil return line. Minimum recommended oil return line size is 5/8" O.D. tubing or equivalent I.D. (1/2" minimum). Return line must constantly descend from the compressor to the engine crankcase. Make certain oil drain passages in the compressor and mating engine surfaces are unobstructed and aligned. Special care must be taken when sealants are used with, or instead of, gaskets. |
| | C. Poorly filtered inlet air. | C. Check for damaged, defective or dirty air filter on engine or compressor. Check for leaking, damaged or defective compressor air intake components (e.g. induction line, fittings, gaskets, filter bodies, etc.). The compressor intake should not be connected to any part of the exhaust gas recirculation (E.G.R.) system on the engine. |
| | D. Insufficient compressor cooling (compressor runs hot). | D. For air-cooled portions of the compressor: <ol style="list-style-type: none"> 1. Remove accumulated grease, grime or dirt from the cooling fins. Replace components found damaged. 2. Check for damaged cooling fins. Replace components found damaged. For water-cooled compressor or water-cooled portions of the compressor: <ol style="list-style-type: none"> 1. Check for proper coolant line sizes. Minimum recommended size is 1/2" O.D. tubing. 2. Check the coolant flow through the compressor. Minimum allowable flow is 2.5 gallons per minute at engine governed speed. If low coolant flow is detected, inspect the coolant lines and fittings for accumulated rust scale, kinks and restrictions. 3. Water temperature should not exceed 200 degrees Fahrenheit. 4. Optimum cooling is achieved when engine coolant flows into the cylinder block at one end and out the compressor cylinder head at the opposite end. |

COMPRESSOR TROUBLESHOOTING CHART (Continued)

| SYMPTOMS | CAUSE | REMEDY |
|---------------------------------|---|--|
| 1. (Continued) | E. Contaminants not being regularly drained from system reservoirs. | E. Check reservoir drain valves to insure that they are functioning properly. It is recommended that the vehicle should be equipped with functioning automatic drain valves, or have all reservoirs drained to zero (0) psi daily, or optimally to be equipped with a desiccant-type air dryer prior to the reservoir system. |
| | F. Compressor runs loaded an excessive amount of time. | F. Vehicle system leakage should not exceed industry standards of 1 psi pressure drop per minute without brakes applied and 3 psi pressure drop per minute with brakes applied. If leakage is excessive, check for system leaks and repair. |
| | G. Excessive engine crankcase pressure. | G. Test for excessive engine crankcase pressure & replace or repair ventilation components as necessary. (An indication of crankcase pressure is a loose or partially lifted dipstick.) |
| | H. Excessive engine oil pressure. | H. Check the engine oil pressure with a test gauge and compare the reading to the engine specifications. Bendix does not recommend restricting the compressor oil supply line because of the possibility of plugging the restriction with oil contaminants. Minimum oil supply line size is 1/4" I.D. tubing. |
| | I. Faulty compressor. | I. Replace or repair the compressor only after making certain none of the preceding installation defects exist. |
| 2. Noisy compressor operations. | A. Loose drive gear or pulley. | A. Inspect the fit of the drive gear on pulley on the compressor crankshaft. The pulley on gear must be completely seated and the crankshaft nut must be tight. If the compressor crankshaft surface or its keyway are damaged, it is an indication of loose drive components. If damage to the compressor crankshaft is detected, replace the compressor. When installing the drive gear or pulley, torque the crankshaft nut to the appropriate torque specifications. Do not back off the crankshaft nut to align the cotter pin and castellated nut. (Some compressors do not use castellated nuts.) Do not use impact wrenches. |

COMPRESSOR TROUBLESHOOTING CHART (Continued)

| SYMPTOMS | CAUSE | REMEDY |
|---|--|--|
| | B. Excessively worn drive couplings or gears. | B. Inspect drive gear and couplings and engine for excessive wear. Replace as necessary. (Nonmetallic gears should be replaced when the compressor is changed.) Drive gear should be metal-type on Detroit Diesel engine. |
| | C. Compressor cylinder head or discharge line restrictions. | C. Inspect the compressor discharge port and discharge line for carbon build-up. If carbon is detected, check for proper cooling to the compressor. (See Cause and Remedy (D) under Symptom #1.) Inspect the discharge line for kinks and restrictions. Replace discharge line as necessary. |
| | D. Worn or burned out bearings. | D. Check for proper oil pressure in the compressor. Minimum required oil pressure: 5 psi engine idling, 15 psi maximum governed engine rpm. Check for excessive oil temperature—should not exceed 240 degrees Fahrenheit. |
| | E. Faulty compressor. | E. Replace or repair the compressor after determining none of the preceding installation defects exist. |
| 3. Excessive build-up and recover time. Compressor should be capable of building air system from 85-100 psi in 40 seconds with engine at full governed rpm. Minimum compressor performance is certified to meet Federal requirements by the vehicle manufacturer. Do not downsize the original equipment compressor. | A. Dirty induction air filter. | A. Inspect engine or compressor air filter and replace if necessary. |
| | B. Restricted induction line. | B. Inspect the compressor air induction line for kinks and restrictions and replace as necessary. |
| | C. Restricted discharge line or compressor discharge cavity. | C. Inspect the compressor discharge port and line for restrictions and carbon build-up. If a carbon build-up is found, check for proper compressor cooling. Replace faulty sections of the discharge line. |
| | D. Slipping drive components. | D. Check for faulty drive gears and couplings and replace as necessary. Check the condition of drive belts and replace or tighten, whichever is appropriate. |
| | E. Excessive air system leakage. | E. Test for excessive system leakage and repair as necessary. Use the following as a guide: Build system pressure to governor cutout and allow the pressure to stabilize for one minute. Using the dash gauge, note the system pressure and the pressure drop after two minutes. The pressure drop for Pre-1975 vehicles should not exceed: 1. 4 psi for a single vehicle. 2. 6 psi for a tractor trailer. 3. 10 psi for a tractor and 2 trailers. |

COMPRESSOR TROUBLESHOOTING CHART (Continued)

| SYMPTOMS | CAUSE | REMEDY |
|--------------------------------|--|---|
| 3. (Continued) | | <p>The pressure drop for Post-1975 vehicles should not exceed:</p> <ol style="list-style-type: none"> 1. 2 psi in each reservoir for a single vehicle. 2. 6 psi in each reservoir for a tractor and trailer. 3. 8 psi in each reservoir for a tractor and 2 trailers. |
| | F. Sticking unloader pistons. | F. Check the operation of the unloading pistons in the inlet cavity of the compressor. Both pistons should have the plunger flanges resting on the inlet cavity floor when the compressor is loaded (pumping air). If the pistons and plunger are not fully retracted, check for proper operation of the compressor air governor. If the governor is operating properly, replace the unloader pistons and plungers and inspect their bores in the cylinder block. Clean lubricate as necessary. Inspect for bent, linked or blocked tubing leading to or from the governor. |
| | G. Faulty compressor. | G. Replace or repair the compressor after determining none of the preceding installation defects exist. |
| 4. Compressor fails to unload. | A. Faulty governor or governor installation. | A. Test the governor for proper operation and inspect air lines to and from the governor for kinks or restrictions. Replace or repair the governor or its connecting air lines. |
| | B. Faulty or worn unloader pistons or bores. | B. Inspect for worn, dirty or corroded unloader pistons and their bores. Replace as necessary. |
| 5. Compressor leaks oil. | A. Damaged mounting gasket. | A. Check the compressor mounting bolt torque. If the mounting bolt torque is low, replace the compressor mounting gasket before retorquing the mounting bolts. |
| | B. Cracked crankcase or end cover. | B. Visually inspect the compressor exterior for cracked or broken components. Cracked or broken crankcases or mounting flanges can be caused by loose mounting bolts. The end cover can be cracked by overtorquing fitting or plugs installed in the end cover. Replace or repair the compressor as necessary. |
| | C. Loose end cover cap cover. | C. Check the cap screw torques and tighten as necessary. |
| | D. Loose oil supply or return line fittings. | D. Check the torque of external oil line fittings and tighten as necessary. |
| | E. Porous compressor casting. | E. Replace the compressor if porosity is found. |

COMPRESSOR TROUBLESHOOTING CHART (Continued)

| SYMPTOMS | CAUSE | REMEDY |
|--|--|--|
| 5. (Continued) | F. Mounting flange or end cover, o-ring or gasket - missing, cut or damaged. | F. Replace as necessary. |
| 6. Compressor constantly cycles (compressor remains unloaded for a very short time). | A. Leaking compressor unloader pistons. | A. Remove the compressor inlet air strainer or fitting. With the compressor unloaded (not compressing air), check for air leakage. Replace as necessary. |
| | B. Faulty Governor. | B. Test the governor for proper operation and repair or replace as necessary. |
| | C. Excessive system leakage. | C. Test for excessive system leakage as instructed in Symptom #3 Remedy E. Reduce leakage wherever possible. |
| | D. Excessive reservoir contaminants. | D. Drain reservoirs. |
| 7. Compressor leaks coolant. | A. Improperly installed plugs and coolant line fittings. | A. Check torque of fittings and plugs and tighten as necessary. Overtorqued fittings and plugs can crack the head or block casting. |
| | B. Freeze cracks due to improper antifreeze strength. | B. Test antifreeze and strengthen as necessary. Check coolant flow through compressor to assure the proper antifreeze mixture reaches the compressor. |
| | C. Faulty compressor (porous castings). | C. If casting porosity is detected, replace the compressor. |
| 8. Compressor head gasket failure. | A. Restricted discharge line. | A. Clear restriction or replace line. |
| | B. Loose head bolts. | B. Tighten evenly to a torque of 25-30 foot pounds. |
| | C. Faulty compressor or head gasket. | C. Check for rough or poorly machined head or block surfaces. Replace necessary components. |

